



NOTE:
 GREEN = LEFT CHANNEL
 RED = RIGHT CHANNEL
 BLACK = SIGNAL GROUND
 TWIST ALL SIGNAL WIRES!
 USE TWISTED PAIR OF 24GAUGE MULTI STRAND WIRE FOR SIGNAL WIRING.
 CONNECT BOTH THE SIGNAL & GROUND OF EACH PAIR TO THE RESPECTIVE RCA SOCKET.
 AT THE SELECTOR SWITCH, CONNECT THE SIGNAL TO THE CORRESPONDING **ROUND** PAD AND THE GROUND WIRE TO ITS **SQUARE** PAD PARTNER.
 PAD 1 = PHONO
 PAD 2 = CD
 PAD 3 = TUNER
 PAD 4 = AUX
 RIGHT CHANNEL ROW A
 LEFT CHANNEL ROW B